


Room Airconditioner Manual

Basic Controls

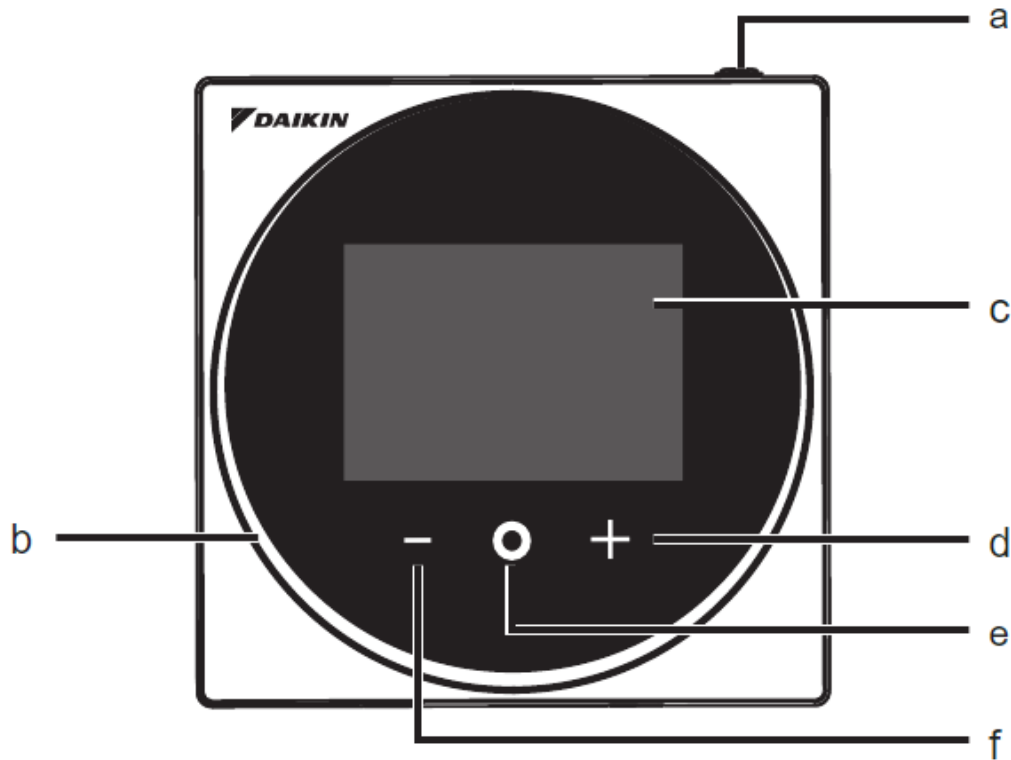

a	ON/OFF	<ul style="list-style-type: none"> • Press this button to turn on the system. • Press this button again to turn off the system.
b	STATUS INDICATOR	<ul style="list-style-type: none"> • During operation, the light ring around the display lights up blue/red/green. <p>Lights up blue: Operating Blinks red: Error is occurring Lights up/blinks green: Bluetooth connecting</p>
c	LCD	<ul style="list-style-type: none"> • Displays the current setpoint and air conditioner operation status.
d	NAVIGATE/ ADJUST	<ul style="list-style-type: none"> • Navigate right. • Adjust a setting.
e	SELECT/ ACTIVATE/ SET	<ul style="list-style-type: none"> • From the home screen, enter the user menu. • From the user menu, enter one of the submenus. • From their respective submenu, activate an operation/ventilation mode.
f	NAVIGATE/ ADJUST	<ul style="list-style-type: none"> • Navigate left. • Adjust the setting.

Adjust Temperature

Ensure you are on the home screen, as shown below.



Press **+** and **-** to change the temperature.

Change Fan Speed

Navigate to the fan speed menu shown below.



Press **-** or **+** to adjust the fan speed and **⊙** to confirm.

